

# Bettis G01-Extension Series

## Extension Pneumatic Double-Acting & Spring-Return Actuator Torque Chart Imperial

**BETTIS™**



# Torque - Pneumatic Double-Acting Actuator

Actuator Model	Stroke Direction Start/Min./End		Operating Pressure, (psig)																MinOP (psig)	Torque @ MinOP (lbf-in)	MOP (psig)	Torque @ MOP (lbf-in)	
			40	50	60	70	80	90	100	110	120	130	140	150	160	170	180	190					200
			Pressure Torque Output: Start/Min./End (lbf-in)																				
G01x05	Start	Outboard	2,884	3,689	4,495	5,301	6,107	6,914	7,720	8,527	9,334	10,141	10,949	11,756	12,564	13,372	14,180	14,989	15,797	40	2,884	200	15,797
	Min		1,610	2,034	2,459	2,884	3,308	3,733	4,158	4,583	5,008	5,433	5,858	6,283	6,708	7,133	7,559	7,984	8,409		1,610		8,409
	End		2,881	3,686	4,491	5,296	6,101	6,907	7,713	8,519	9,325	10,131	10,938	11,745	12,552	13,359	14,166	14,974	15,782		2,881		15,782
	Start	Inboard	2,751	3,523	4,295	5,068	5,841	6,614	7,388	8,161	8,935	9,709	10,483	11,257	12,032	12,807	13,581	14,357	15,132		2,751		15,132
	Min		1,540	1,947	2,355	2,762	3,169	3,577	3,984	4,391	4,799	5,207	5,614	6,022	6,430	6,838	7,245	7,653	8,061		1,540		8,061
	End		2,748	3,519	4,291	5,063	5,835	6,608	7,380	8,153	8,926	9,699	10,473	11,246	12,020	12,794	13,568	14,343	15,117		2,748		15,117
G01x07	Start	Outboard	5,951	7,552	9,154	10,756	12,358	13,961	15,564	17,167	18,770	20,374	21,978	23,582	25,186	26,791	28,396	Exceeds MOP	5,951	185	29,199		
	Min		3,249	4,091	4,933	5,775	6,617	7,459	8,302	9,144	9,987	10,829	11,672	12,515	13,357	14,200	15,043		3,249		15,465		
	End		5,945	7,545	9,145	10,745	12,346	13,947	15,548	17,150	18,752	20,354	21,956	23,559	25,161	26,765	28,368		5,945		29,170		
	Start	Inboard	5,818	7,386	8,954	10,523	12,092	13,661	15,231	16,801	18,371	19,941	21,512	23,083	24,654	26,226	27,797		5,818		28,583		
	Min		3,179	4,004	4,829	5,653	6,478	7,303	8,128	8,953	9,778	10,603	11,428	12,254	13,079	13,904	14,730		3,179		15,143		
	End		5,812	7,379	8,945	10,513	12,080	13,648	15,216	16,784	18,353	19,922	21,491	23,060	24,630	26,200	27,770		5,812		28,555		

Note: All Published Torques are Guaranteed Minimum Values. Units are Imperial

Torque - Pneumatic  
Spring-Return Actuator

Actuator Model	Spring Torque Start/Min./End (lbf-in)		Operating Pressure, (psig)														MinOP (psig)	Torque @ MinOP (lbf-in)	MOP (psig)	Torque @ MOP (lbf-in)							
			40	50	60	70	80	90	100	110	120	130	140	150	160	170					180	190	200				
			Pressure Torque Output: Start/Min./End (lbf-in)																								
G01x07-SR1	Start	18,264																		Please consult factory	10,455	11,978	Exceeds MOP	166	9,845	185	12,739
	Min.	8,650																	4,607		5,416	4,282			5,820		
	End	14,507																			6,706	8,228			6,097		8,989
G01x07-SR2	Start	15,282																		Please consult factory	7,647	9,169	Exceeds MOP	140	7,647	185	14,499
	Min.	7,427																	3,473		4,280	3,473			7,092		
	End	12,749																			5,121	6,642			5,121		11,967
G01x07-SR3	Start	13,329																		Please consult factory	7,737	9,259	Exceeds MOP	122	6,519	185	16,111
	Min.	6,498																	3,617		4,421	2,971			8,031		
	End	11,139																			5,552	7,072			4,335		13,918
G01x07-SR4	Start	11,322																		Please consult factory	6,141	7,662	Exceeds MOP	104	5,228	185	17,559
	Min.	5,601																	2,930		3,733	2,446			8,940		
	End	9,693																			4,516	6,036			3,604		15,923
G01x07-SR5	Start	10,627																		Please consult factory	7,276	8,797	Exceeds MOP	98	6,972	185	20,215
	Min.	4,676																	2,932		3,752	2,767			9,794		
	End	7,039																			3,691	5,210			3,387		16,617
G01x08-SR5	Start	10,544																		Please consult factory	7,821	9,801	Exceeds MOP	76	7,029	192	30,013
	Min.	4,654																	3,247		4,307	2,818			14,965		
	End	6,956																			4,236	6,213			3,444		26,406
G01x09-SR5	Start	10,485																		Please consult factory	7,082	9,608	Exceeds MOP	59	6,830	200	42,476
	Min.	4,638																	2,858		4,215	2,721			21,518		
	End	6,896																			3,497	6,020			3,245		38,856
G01x10-SR5	Start	10,413																		Please consult factory	8,622	11,974	Exceeds MOP	45	6,945	166	47,541
	Min.	4,619																	3,702		5,485	2,798			24,184		
	End	6,824																			5,035	8,385			3,360		43,916
G01x12-SR5	Start	10,301	10,993	15,805	20,617	25,429	30,243	35,056	39,870	44,685										Exceeds MOP			Exceeds MOP	31	6,663	116	47,574
	Min.	4,589	4,988	7,530	10,063	12,592	15,120	17,647	20,173	22,700											2,670	24,216					
	End	6,712	7,404	12,211	17,018	21,826	26,635	31,443	36,253	41,063											3,078	43,949					
G01x14-SR5	Start	10,211	15,069	20,923	26,777	32,631	38,486	44,342												Exceeds MOP			Exceeds MOP	26	6,875	91	44,927
	Min.	4,566	7,164	10,245	13,321	16,394	19,467	22,540													2,809	22,847					
	End	6,623	11,476	17,324	23,172	29,021	34,870	40,720													3,291	41,305					
G01x05-SR6	Start	7,865																		Please consult factory	5,387	6,137	Exceeds MOP	147	5,161	200	9,141
	Min.	3,456																	2,180		2,586	2,057			4,189		
	End	5,191																			2,715	3,465			2,490		6,466
G01x07-SR6	Start	7,753																		Please consult factory	6,196	7,716	Exceeds MOP	73	5,131	185	22,177
	Min.	3,426																	2,634		3,446	2,058			11,073		
	End	5,079																			3,523	5,043			2,460		19,489
G01x08-SR6	Start	7,670																		Please consult factory	5,824	7,803	Exceeds MOP	56	5,033	192	31,975
	Min.	3,404																	2,454		3,512	2,024			16,239		
	End	4,996																			3,152	5,129			2,361		29,277

Note: All Published Torques are Guaranteed Minimum Values. Units are Imperial





**World Area Configuration Centers (WACC) offer sales support, service, inventory and commissioning to our global customers.**

**Choose the WACC or sales office nearest you:**

***NORTH & SOUTH AMERICA***

19200 Northwest Freeway  
Houston, TX 77065  
USA  
T +1 281 477 4100  
F +1 281 477 2809

Av. Hollingsworth,  
325, Iporanga Sorocaba,  
SP 18087-105  
Brazil  
T +55 15 3238 3788  
F +55 15 3228 3300

***ASIA PACIFIC***

No. 9 Gul Road  
#01-02 Singapore 629361  
T +65 6777 8211  
F +65 6268 0028

No. 1 Lai Yuan Road  
Wuqing Development Area  
Tianjin 301700  
P.R.China  
T +86 22 8212 3300  
F +86 22 8212 3308

***MIDDLE EAST & AFRICA***

Dubai  
P. O. Box 17033  
Dubai  
United Arab Emirates  
T +971 4 811 8100  
F +971 4 886 5465

P. O. Box 10305  
Jubail 31961  
Saudi Arabia  
T +966 3 340 8650  
F +966 3 340 8790

24 Angus Crescent  
Longmeadow Business Estate East  
P.O. Box 6908; Greenstone; 1616  
Modderfontein, Extension 5  
South Africa  
T +27 11 451 3700  
F +27 11 451 3800

***EUROPE***

Berenyi u. 72- 100  
Videoton Industry Park,  
Building #230  
Székesfehérvár 8000  
Hungary  
T +36 22 530 950  
F +36 22 543 700

For complete list of sales and manufacturing sites, please visit  
[www.emerson.com/actuationtechnologieslocations](http://www.emerson.com/actuationtechnologieslocations)  
Or contact us at [info.actuationtechnologies@emerson.com](mailto:info.actuationtechnologies@emerson.com)

[www.emerson.com/bettis](http://www.emerson.com/bettis)

©2017 Emerson. All rights reserved.

The Emerson logo is a trademark and service mark of Emerson Electric Co. Bettis™ is a mark of one of the Emerson family of companies. All other marks are property of their respective owners.

The contents of this publication are presented for information purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. All sales are governed by our terms and conditions, which are available on request. We reserve the right to modify or improve the designs or specifications of our products at any time without notice.